


# Principle connection XT module

The XT module has outputs to indicate vehicle types, vehicle numbers and light functions. These outputs switches to GND when active.

These outputs can be connected to S88 feedback module (these should accept an active GND signal) for feedback to a control station. From there they can be sent to a computer and be used in computer software.

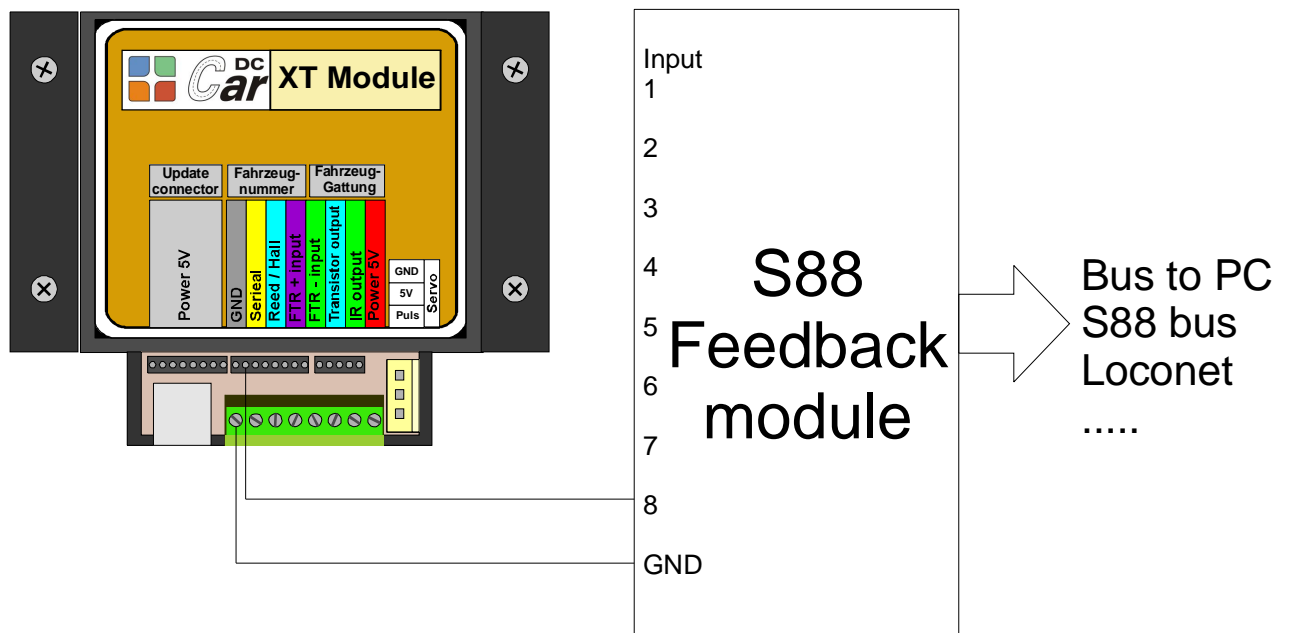

In the example above vehicle with number 2 is feedback to 8th input of the S88 feedback module.

The feedback thus generated can be used to activate functions in software. Unfortunately it is not yet possible to use it for automatic recognition of the vehicles address and make it automatically work in the software. Nor Traincontroller, iTrain or Windigipet supports this automatic recognition.....

Please ask your software supplier to impliment this!!!